


## NOTE:


These connectors are **NOT** standard coax connectors. Each connector comes in two parts:  
1) The Black Cap 2) The Silver F to UHF connector.

*To fit to cable follow these instructions, carefully.*


1. Begin by placing the black cap on to the coaxial cable, first. Cut away the outer sheathing to reveal the copper braiding and fan this out around the cable as shown in the picture below.

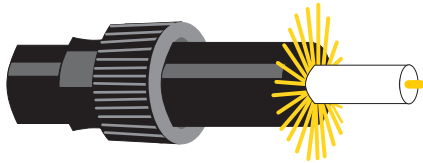

2. Cut away the centre dielectric, (white plastic) so that it stands proud from the end of the cable approx. 1mm. This will reveal the copper centre pin (approx. 8mm long).

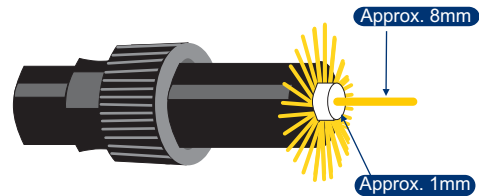


3. Push the centre pin up inside the silver part of the connector until it sits tight against the white plastic. If you can still see the centre pin then trim it back slightly and try again, as shown.

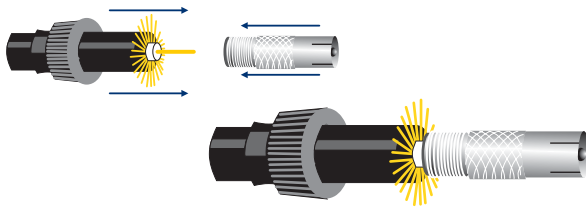

Make sure the outer braiding does not cross the base of the centre pin, thus causing a short circuit.

4. Finish by wrapping the copper braiding around the threaded part of the silver connector before pushing the black cap over the top of the whole lot to hold it all in place.

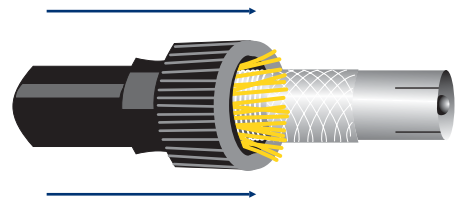

**NOTE:** *If you can pull the connector off the end of the cable, after you have fitted it, it is either not fitted correctly, or the cable is poor quality and does not have enough screening for a tvLINK® installation.*